

## Tyre Changing Method

### ● **Checking points before mounting and demounting**

- Mounting and demounting could be dangerous so specially trained persons should mount tires with proper equipment
- Ensure that the wheel and tires are in good condition
- Never use damaged tire and wheel
- Use tires suitable for wheel
- Always use a recommended bead lubricant on both bead and bead seat in order to avoid bead fitting damage

### ● **Notice points while mounting and demounting**

- Ensure that air wouldn't leaking from the valve
- When changing tires, make sure to be changed valve
- When inflating tires make sure to use safety equipment
- Make sure to check fitting position between tire and rim before inflating the tire
- Do not exceed the maximum inflation pressure specified by the tire
- Ensure that air wouldn't leaking from the tire after inflating the tire



**Make sure to follow the rules as above.  
Failure to adhere to these rules could result in injury.**